

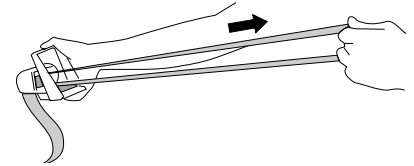
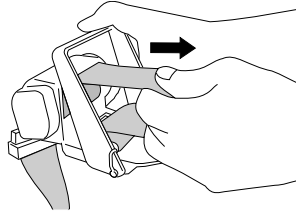
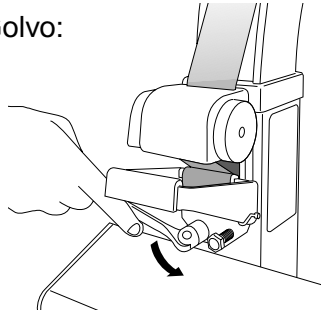
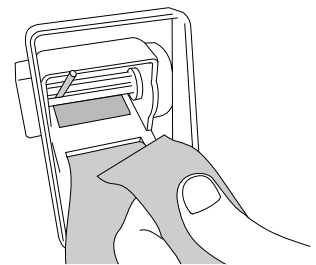


Golvo:

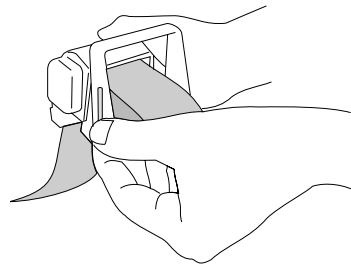




1. Pull the strap all the way out .

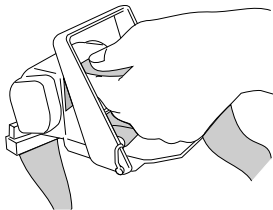

2. Hold the springloaded wheel and release the strap by removing the pin.

3. Remove the pin. \triangle Do not let go of the springloaded wheel, or the tension will release.




4. Use the pin to lock the axle where the strap was mounted.

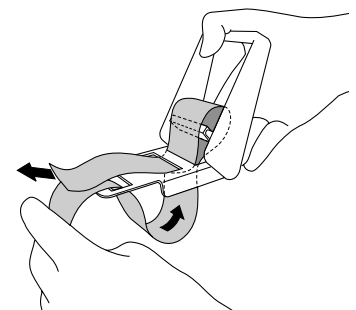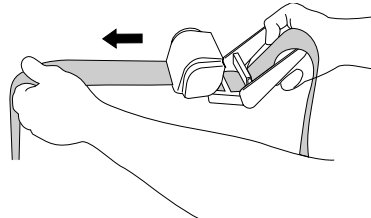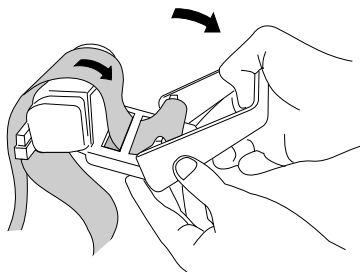

5. Push the emergency lowering handle down and pull away the strap.

6. Pull out the rest of the strap and remove the plastic housing.

7. Mount the new strap through the plastic housing with the red mark towards the plastic housing and then as shown above.

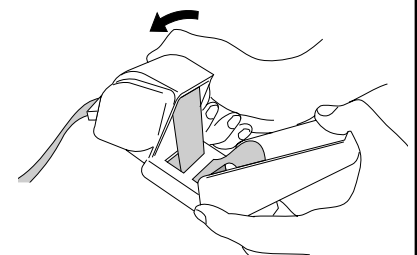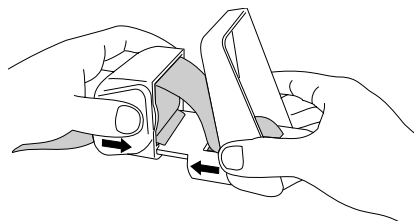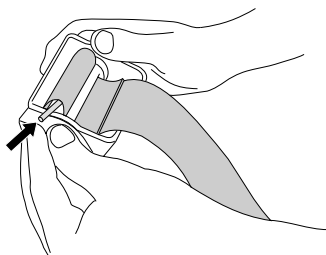

8. Mount the strap through the slot in the axle and back the same way. Note! The axle have two different sides. Place the pin as shown to lock the strap. \triangle Do not let go of the springloaded wheel, or the tension will release.

9. Push the plastic housing on to the strap joint.

10. Roll up the strap until the red mark reaches the plastic housing.